




**3D Термопанелі для внутрішнього
та зовнішнього оздоблення**

senadform®

Dekoratif Paneller

↔1200 mm ↓500 mm ↗20 mm

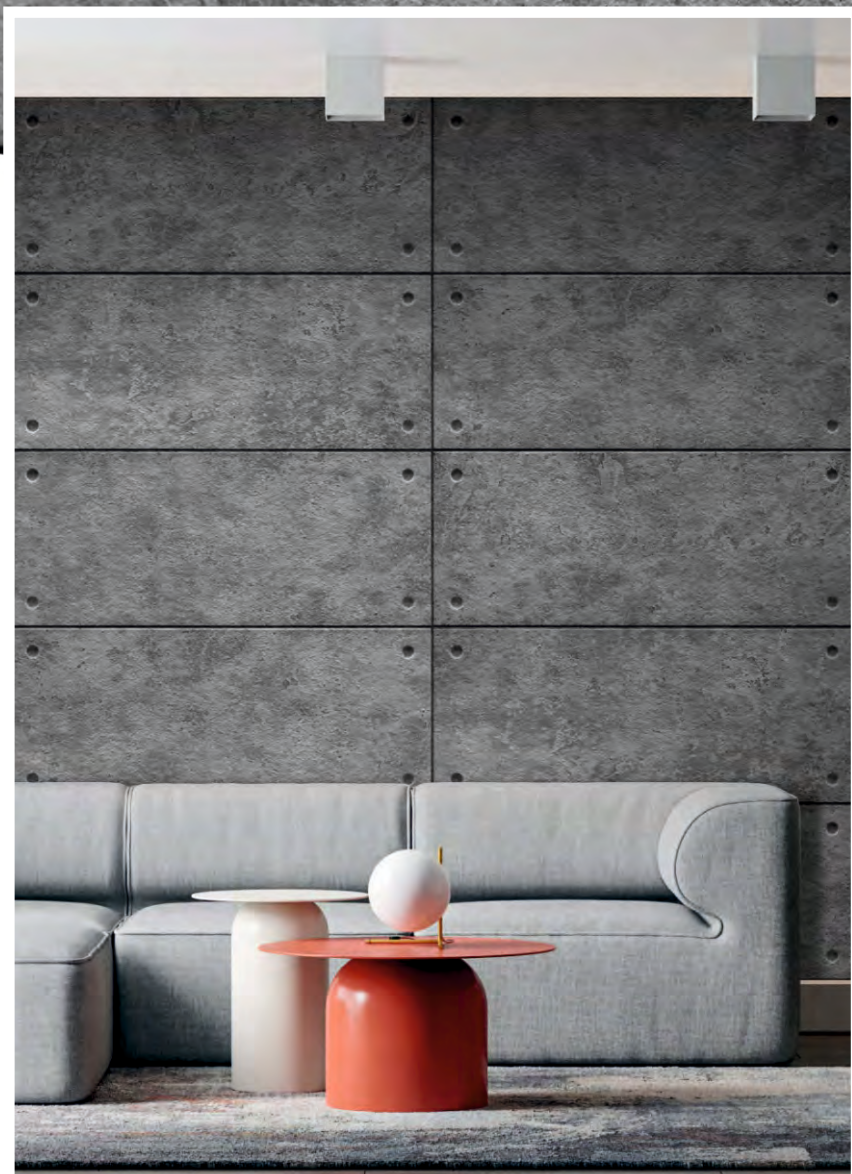

687-201

Dekoratif Paneller

↔1200
mm

↑500
mm

↗20
mm



910-201



910-202




910-203



910-204

Dekoratif Paneller

↔1200 mm ↑500 mm ↗20 mm





651-207



651-208



651-211



651-213



651-218



651-223



651-228




651-229



651-230



651-231

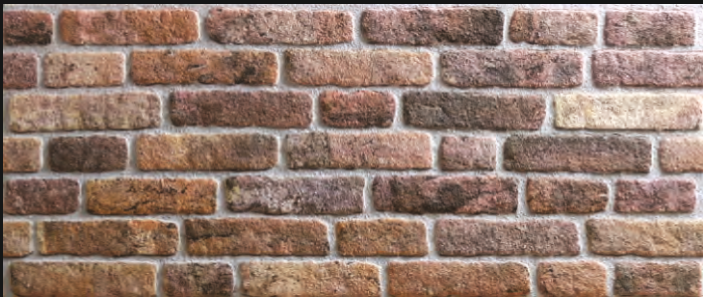

651-233



651-237



651-238



651-242



689-054

ДЕКОРУЄМО В 3 КРОКИ

Відміряй



Поміряйте стіну, яку хочете прикрасити

Відріж



Підріжте панель відповідно до розмірів стіни

Нанеси



Нанесіть поліуретановий клей-піну на основу панелі

